SEU-1

User Information

Correct Use

The SEU-1 contact block in combination with any basic device from the IDEM SCR series can be used to produce up to three additional safety contact paths per device. An existing system can thus be expanded practically indefinitely in a modular manner. Activation takes place via a safety contact of the basic device, the SEU-1 provides signaling contacts for fault monitoring. The devices can be used in systems up to safety category 4, PL e according to EN ISO 13849-1.









Features

- 3 safe, redundant relay outputs
 1 auxiliary contact (fault monitoring)
- · Activation via basic device from the IDEM SCR series
- · Modular, freely configurable safety system
- · Fault monitoring by basic device

- · Earth fault monitoring
- · Indication of the switching state via LED
- Up to PL e, SILCL 3, category 4

Function

The safety expansion contact block SEU-1 in combination with a basic device from the IDEM SCR series is designed for safe isolation of safety circuits according to EN 60204-1 and can be used up to safety category 4, PL e according to EN ISO 13849-1.

Terminal S11 (DC 24V control voltage) is connected with terminals S15 and S16 via the safety contacts of the basic device. Starting the basic device also activates the SEU-1. The basic device disconnects the control voltage when the safety switch is operated, and the safety contacts of the SEU-1 open immediately.

If a fault occurs in the SEU-1, this is detected by the basic device via terminals S23 and S24.

Independent operation without basic device is not possible

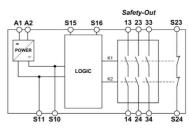


Fig. 1 Block diagram SEU-1

Installation

As per EN 60204-1, the device is intended for installation in control cabinets with a minimum degree of protection of IP54. It is mounted on a 35-mm DIN rail according to DIN EN 60715 TH35.



Fig. 2 Installation / removal



Safety Precautions

- Installation and commissioning of the device must be performed only by authorized personnel.
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this user information, otherwise there is a risk that the safety function will be lost.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- All relevant safety regulations and standards are to be observed.
- The overall concept of the control system in which the device is incorporated must be validated by the user.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.



- When the 24V version is used, a control transformer according to DIN EN 61558-2-6 or a power supply unit with electrical isolation from the mains must be connected.
- External fusing of the safety contacts (4 A slow-blow or 6 A quick-action or 10 A gG) must be provided.
- A maximum length of the control lines of 1000 meters with a line cross section of 0.75 mm² must not be exceeded.
- The line cross section must not exceed 2.5 mm².
- If the device does not function after commissioning, it must be returned to the manufacturer unopened. Opening the device will void the warranty.
- PE (protective earth) must be connected to terminal S10 on the AC 115/230V variant. Wiring of the overall device is to be designed for 115/230V.



A1:	Power supply
A2:	Power supply
S11:	DC 24V control voltage
S10:	Control line
S15:	Control line
S16:	Control line
S23:	Fault monitoring
S24:	Fault monitoring
13-14:	Safety contact 1
23-24:	Safety contact 2
33-34:	Safety contact 3

Fig. 3 Connections

SEU-1

User Information



Applications

Depending on the application, the device must be wired with a IDEM basic device as shown in Fig. 1 to Fig. 2.If the devices are wired inside a control cabinet (minimum degree of protection IP54), the fault involving a short circuit between the activation lines can be ruled out (protected wiring space). Category 4, PL e according to EN ISO 13849-1 is thereby possible. If this fault cannot be ruled out, category 3, PL e is achieved.

Wiring

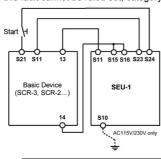


Fig. 1: Connection of SEU-1 to Basic Device

Wiring of the SEU-1 via only 4 lines:

A safety contact of the basic devices (e.g. 13-14) activates the relays of the SEU-1 (S11 and S15/S16).

Two lines on S23 and S24 are required for feedback/fault monitoring. A fault in the SEU-1 thereby prevents the entire safety chain from restarting.

Earth faults in the control lines are detected in addition to internal faults.

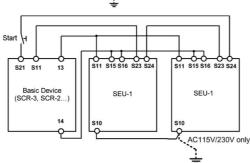


Fig. 2: Connection of several SEU-1 Units to Basic Device

If further SEU-1 units are to be integrated into the system, terminals S11 must be connected in parallel on all SEU-1 units. This also applies to terminals S10 and terminals S15/S16.

Notice

In order to activate earth fault monitoring, S10 must be connected to PE (protective earth) on the AC115/230V devices. With AC/DC 24 V, connect PE only to the power supply unit according to EN60204-1.

Feedback Loop

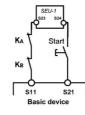


Fig. 3: Feedback Loop

Contactors connected to the SEU-1 or the basic devices are monitored via the feedback loop of the basic device. KA and KB are the positively driven contacts of the connected contactor or expansion module


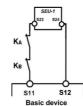


Fig. 4: Feedback Loop with Auto-Start

Contactors connected to the SEU-1 or the basic devices are monitored via the feedback loop of the basic device. KA and KB are the positively driven contacts of the connected contactor or expansion module.


Power supply and Safety contacts

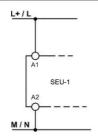

Fia. 5:

Power supply A1 and A2.

(Power supply according to techn Data)

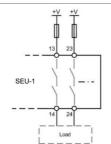

Fia. 6:

Connecting load to safety contacts.

(Figure shows example. Voltage "+V" according to techn. Data)

Commissioning Procedure Note: The items listed under "Electrical connection" must be observed during commissioning

1. Wiring SEU-1:

Wire the SEU-1 with the IDEM basic device according to your application (see Fig. 1 to Fig. 2).

2. Wiring basic device:

Wire the basic device according to the required Performance Level determined (see user information for the basic device).

3. Wiring feedback loop:

Wire the feedback loop as shown in Fig. 3 or Fig. 4.

4. Wiring power supply:

Connect the power supply to terminals A1 and A2 (Fig. 5).

Warning: Wiring only in de-energized state.

5. Starting the device:

Switch on the operating voltage.

Warning

If the "Automatic start" starting behavior is set on the basic device, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button on the basic device to close the safety contacts.

The LEDs **K1** and **K2** on the basic device and on the SEU-1 are lit.

6. Triggering safety function:

Open the emergency stop circuit by actuating the connected safety switch. The safety contacts of the basic device and the SEU-1 open immediately.

7. Reactivation:

Close the emergency stop circuit. If "Automatic start" is selected on the basic device, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button on the basic device to close the safety contacts of the basic device and the SEU-1.



SEU-1

User Information



Maintenance

The device must be checked once per month for proper function and for signs of tampering and bypassing of the safety function.

The device is otherwise maintenance free, provided that it was installed properly.

What to Do in Case of a Fault?

Device does not switch on:

- Check the wiring of the SEU-1 and the basic device by comparing it with the wiring diagrams (also see user information for the basic device).
- Check the safety switch used on the basic device for correct function and adjustment.
- Check whether the emergency stop circuit of the basic device is closed.
- Check whether the start button on the basic device (with manual start) is closed.
- Check the operating voltage at A1 and A2 on the basic device and on the SEU-1.
- Is the feedback loop closed?

Device cannot be switched on again after an emergency stop:

- Check whether the emergency stop circuit was closed again.
- Was the start button opened before closing of the emergency stop circuit (with manual start)?
- Is the feedback loop closed?
- Is the power supply present during the time sequence?

If the fault still exists, perform the steps listed under "Commissioning Procedure".

If these steps do not remedy the fault either, return the device to the manufacturer for examination.

Opening the device is impermissible and will void the warranty.

Safety Characteristics According to EN ISO 13849-1 The device is certified according to EN ISO 13849-1 up to a Performance Level of PL e.

Note:

Additional data can be requested from the manufacturer for applications that deviate from these conditions.

Safety characteristics according to EN ISO 13849-1 for all variants of SEU-1				
Load (DC13; 24V)	<= 0,1A	<= 1A	<= 2A	
T10d [years]	20	20	20	
Category:	4	4	4	
PL	е	е	е	
PFHd [1/h]:	1,2E-08	1,2E-08	1,2E-08	
nop [cycle / year]	<= 400.000	<= 73.000	<= 17.000	


Techn. Data

Corresponds to the standards	EN 60204-1; EN ISO 13849-1; EN 62061		
Operating voltage	AC 230V, AC 115V, AC/DC 24V		
Rated supply frequency	AC: 50-60Hz		
Permissible deviation	+ / - 10%		
Power consumption	DC 24V AC 230V		
	ca. 1.2 W ca. 3.5 VA		
Control voltage at S11	DC 24V		
Control current S11S14	max. 40mA		
Safety contacts	3 NO contacts		
Auxiliary contacts	1 NC contact; monitoring contact for basic device		
Max. switching voltage	AC 250V		
Safety contact breaking capacity	AC: 250V, 1500VA, 6A for ohmic load,		
	250V, 4A for AC-15		
	DC: 24V, 30W, 1.25A for ohmic load;		
	24V, 30W, 2A for DC-13		
	Max. total current through all 3 contacts: 10.5A		
Minimum contact load	24V, 20mA		
Min. Contact fuses	4 A slow-blow or 6 A quick-action or 10A gG		
Max. line cross section	0.14 - 2.5mm ²		
Max. length of control line	1000m with 0.75mm ²		
Contact material	AgNi		
Contact service life	mech. approx. 1 x 10^7 , electr. 1 x 10^5 operating cycles		
Test voltage	2.5kV (control voltage/contacts)		
Rated impulse withstand voltage, leakage path/air gap	4kV (DIN VDE 0110-1)		
Rated insulation voltage	250V		
Degree of protection	IP20		
Temperature range	DC 24V: -15°C to +60°C		
	AC 230/115V: -15°C to +40°C		
Degree of contamination	2 (DIN VDE 0110-1)		
Overvoltage category	3 (DIN VDE 0110-1)		
Weight	approx. 230g		
Mounting	DIN rail according to EN 60715TH35		

SEU-1

User Information

Dimension Drawing

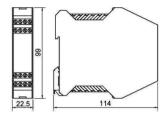



Variants

SEU-1, AC 230V (50-60Hz), fixed screw terminals SEU-1, AC 115V (50-60Hz), fixed screw terminals SEU-1, AC/DC 24V (AC: 50-60Hz), fixed screw terminals

CE EC Declaration of Conformity

Producer: IDEM Safety Switches Ltd., 2 Ormside Close, Hindley Industrial Estate, Hindley Green, Wigan WN2 4HR UK.

Devices: Safety Emergency Stop, Relays for monitoring Emergency Stop and Safety Switches

Idenfification: Types: SEU-1, SEU-TD1

 Product Name
 Affixing of CE marking
 No. of Certificate

 SEU-1
 2010
 968/EZ 469.00/10

 SEU-TD1
 2010
 968/EZ 470.00/10

The above products conform to the Safety Requirement of the following directives:

Machinery Directive 2006/42/EC

EMC Directive (2004/108/EC)

Low Voltage Directive (2006/95/EC)

and the relevant requirements of the stated standards:

EN60439-1:2005-01 EN60947-7-1:2003-07 EN61326-3-1:2008-11 IEC62061:2005-10 EN60947-1:2008-04 EN61000-6-2:2006-03 EN ISO13849-1:2008-12

M. Man

EN60947-5-1:2010-04 EN61000-6-3:2007-09 EN ISO13849-2:2008-09

Certification Body: No. TÜV Rheinland Industrie Service GmbH Geschäftsfehld ASI Am Grauen Stein 51105 Köln

11th October 2010

M. Mohtasham Managing Director

V. Crolla, Documentation Manager

V. Crolla